

Button Assignments for the Palm/Pocket PC

Pocket-PCs have program buttons, four along the bottom and one or two along the left side, that run the built-in programs, “Contacts”, “Calendar” etc. These can be a problem because you usually don’t want to see your calendar during a glider flight. You can set the buttons to activate various programs (including the Pocket-NAV program) by selecting **Start, Settings, and Buttons** . Some button selections, such as the **Start Menu** and **SIP** or **Input Panel** (these are what the small keyboard is variously called) can be useful. These buttons return you to the Pocket-NAV program if they are pushed twice.

If you set one of the buttons to the Pocket-NAV program you can always return to Pocket-NAV by pushing the button. The Pocket-NAV program executable file must be in the “Start Menu” subdirectory to be accessible from the **Start** menu or the program buttons.

We also recommend setting one of the buttons to the “SIP” on the Palm-PC or “Input Panel” on the Pocket-PC. Items such as the **WP Arrival Radius** are set using the input panel. On the Palm-PC, this is also accessible from the task bar at the bottom of the screen. On the Pocket-PC, there is no way to access the input panel while the Pocket-NAV program is running unless one of the buttons is set to activate it.